



A M E R I C A N L E A T H E R[®]

Mattress Pad Installation Instructions

Version 6 Comfort Sleepers

Items included:


1. Velcro strip
for seat cushion

Quantity varies by
comfort sleeper size



Note: Peel backing from this
end to reveal transparent
adhesive tape.

2. Bed section
mattress pad w/
Velcro strip

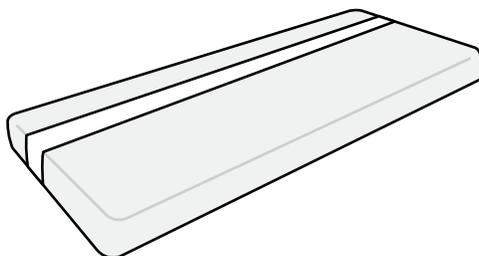


3. Velcro strip

Length varies by
comfort sleeper size




Tools needed for installation:


1. Staple gun

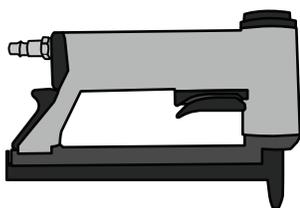

2. Tape Measure

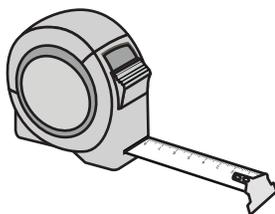

3. Scissors

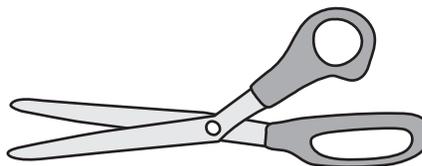

4. Marker







AMERICAN LEATHER®

Mattress Pad Installation Instructions

Version 6 Comfort Sleepers

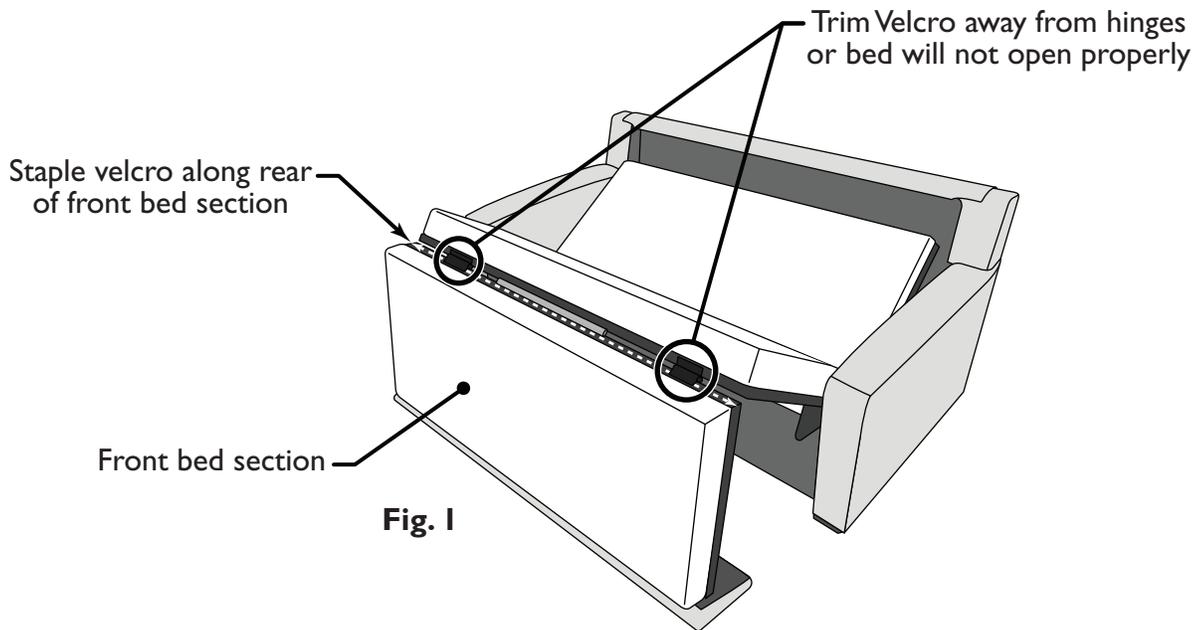

1. Open the comfort sleeper as shown in **Figure 1**. Staple the strip of 1" black Velcro along the rear of the front bed section as indicated by the dotted line in **Figure 1**. *Trim the Velcro off of the hinges or the bed will not open properly!*

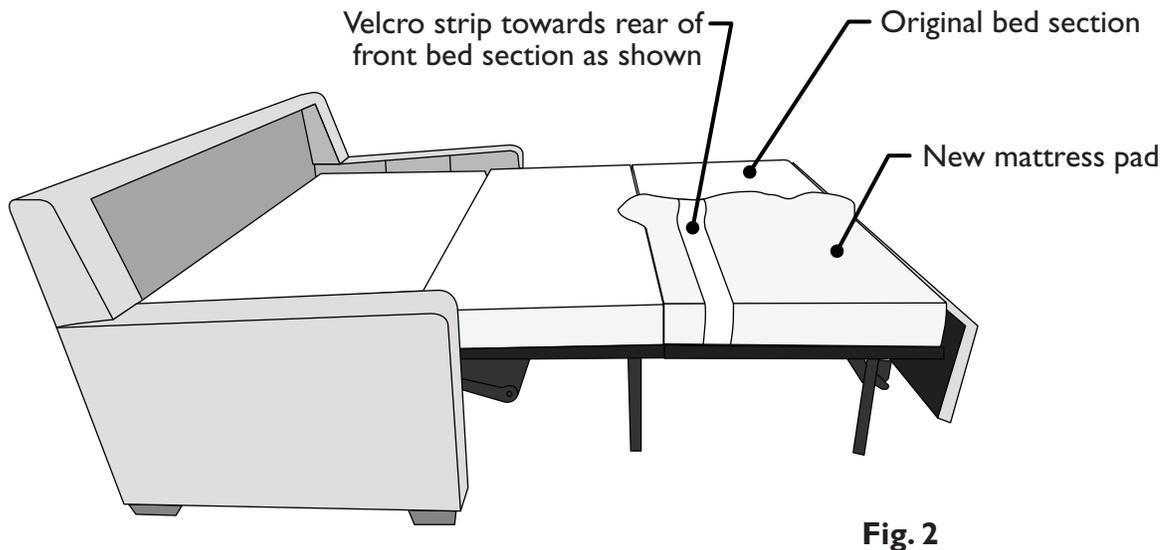


2. Open the bed completely as shown in **Figure 2**. Install the new mattress pad as you would a fitted sheet. Start on one side of the bed section, lining up the corners and tucking the new mattress pad underneath the original bed section. Repeat on the opposite side. Tuck the front side of the new mattress pad under the front side of the old bed section near the deck. Make sure the Velcro strip is oriented towards the rear of the front bed section as shown in **Figure 2**.




Mattress Pad Installation Instructions

Version 6 Comfort Sleepers

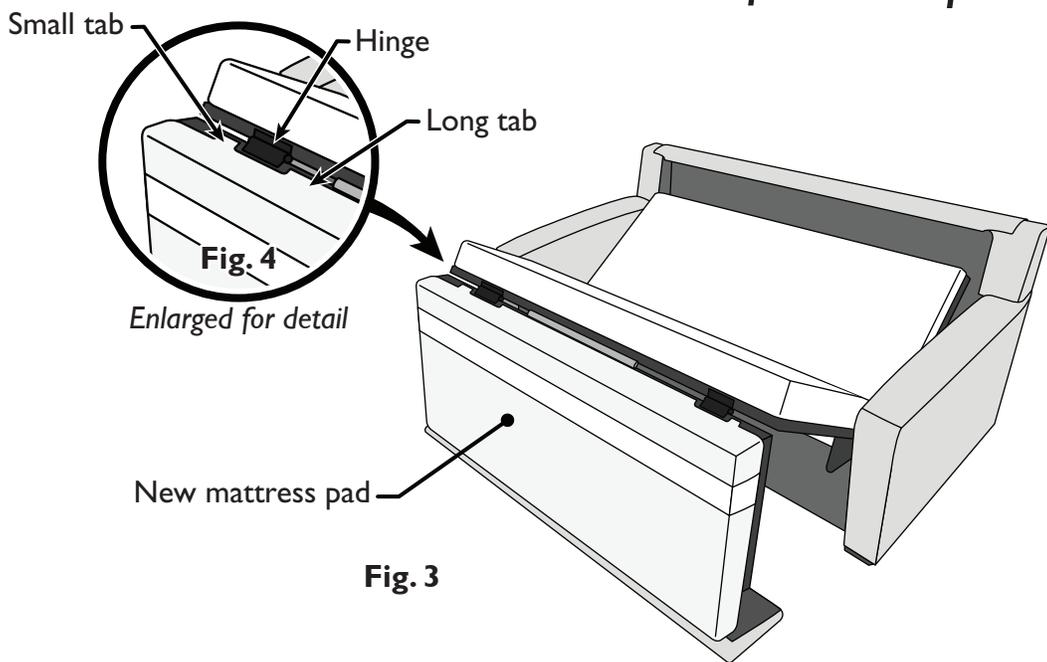

3. Open the comfort sleeper as shown in **Figure 3**. On the rear side of the new mattress pad, there are three tabs - one small tab on either side and a longer tab in the middle - see **Figure 4** for an enlarged view. The two smaller tabs will attach to the Velcro on the outside of the hinges, and the longer tab will attach to the Velcro between the hinges.

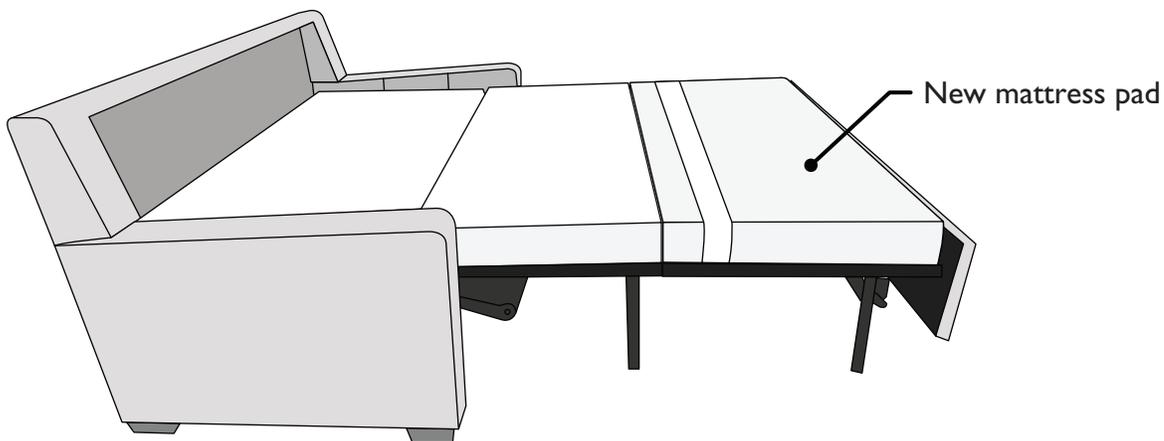


5. Open the bed completely. Smooth out any wrinkles in the new mattress pad. Tuck any excess material under the front and sides of the mattress as you would a fitted sheet. The new mattress pad should fit snugly.




Mattress Pad Installation Instructions

Version 6 Comfort Sleepers

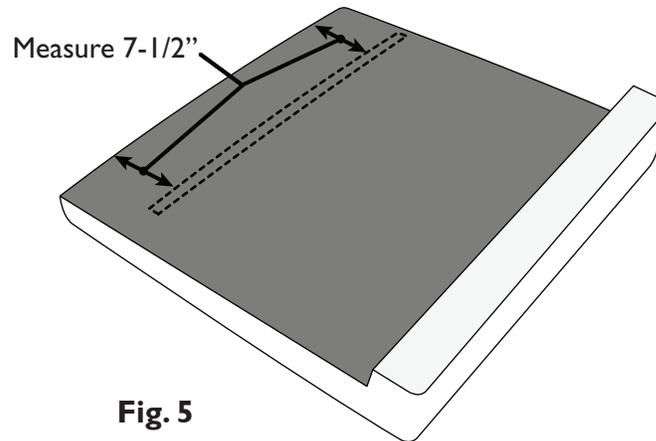

3. Measure 7-1/2" from the zipper on the back of the seat cushion as shown in **Figure 5**. This will be the location of the Velcro strip.

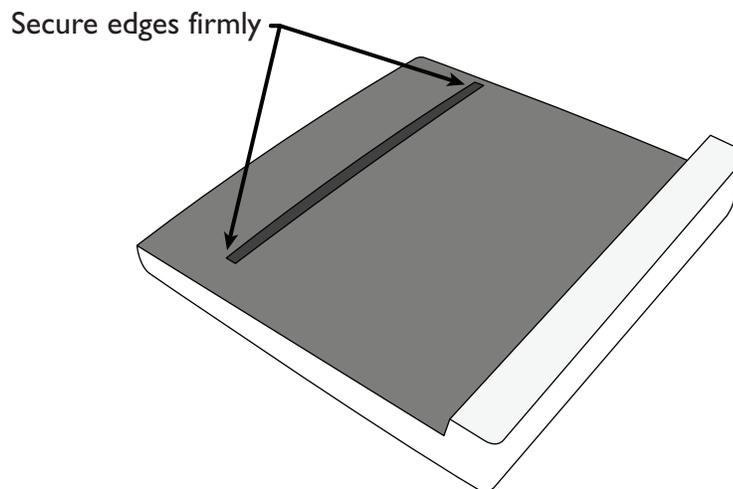

5. Clean the underside of the cushion by removing any debris (lint, dirt, animal hair, etc). Remove the paper backing from the Velcro strip to expose the adhesive. Lay the Velcro strip at the marked 7-1/2" location. Press the Velcro firmly into the cushion to properly adhere it. **Make sure to press firmly on the center of the strip as well as all of the edges. Use a roller if possible for best possible adhesion.** Repeat this for all seat cushions.

Note: Sheets must be removed before bed is folded back into sofa to allow contact between Velcro strips to prevent cushions slipping.